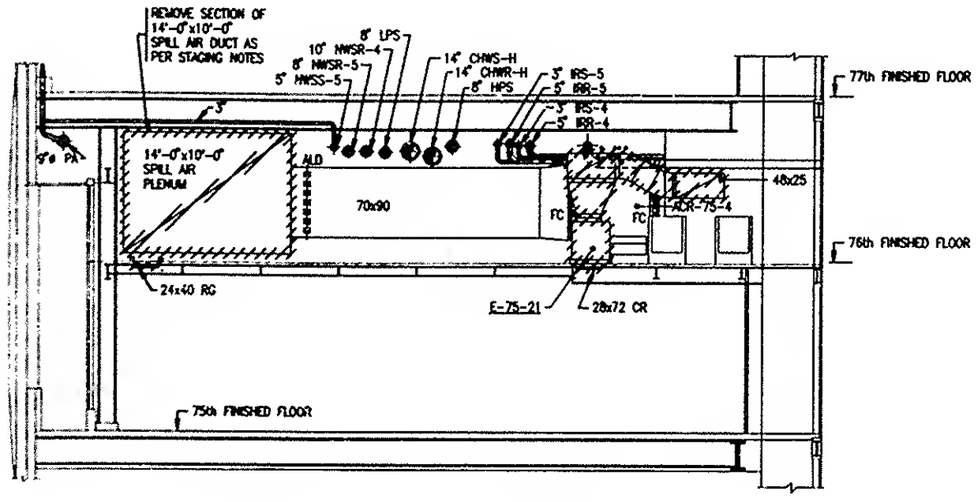

SECTION – REMOVAL L / M-16

SCALE IN FEET 0 8 16

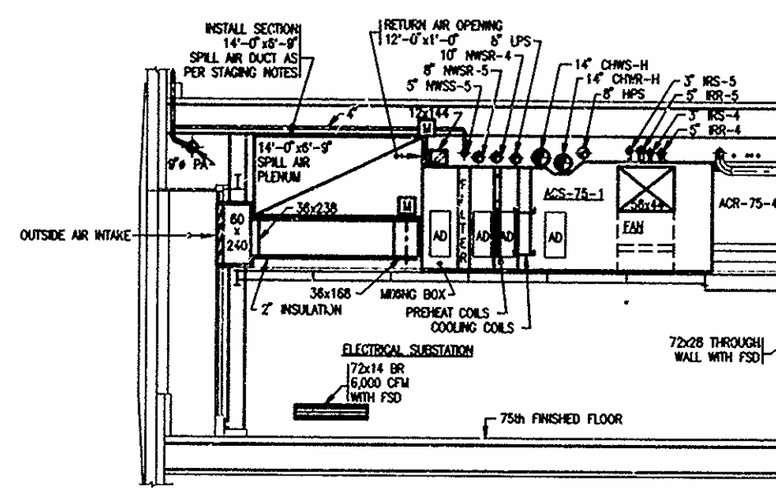

SECTION – INSTALLATION L / M-17

SCALE IN FEET 0 8 16

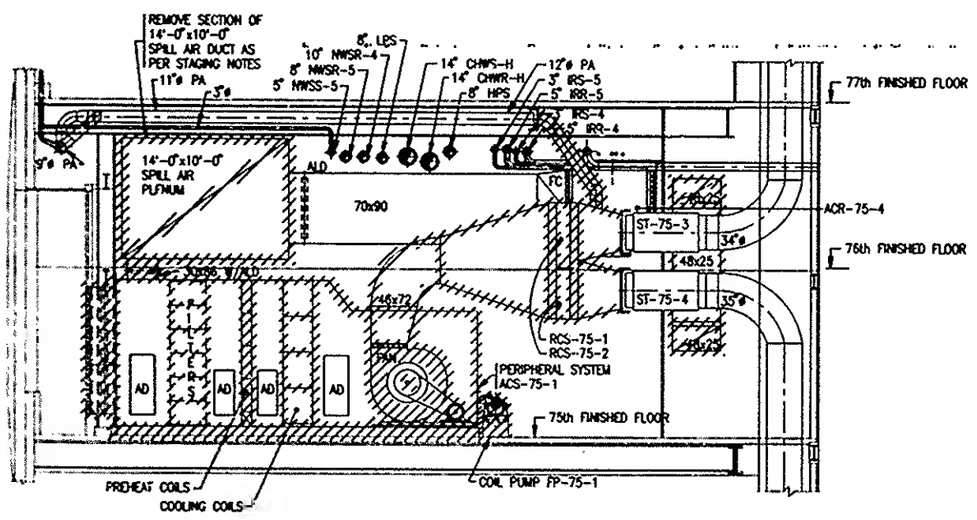

SECTION – REMOVAL K / M-16

SCALE IN FEET 0 8 16

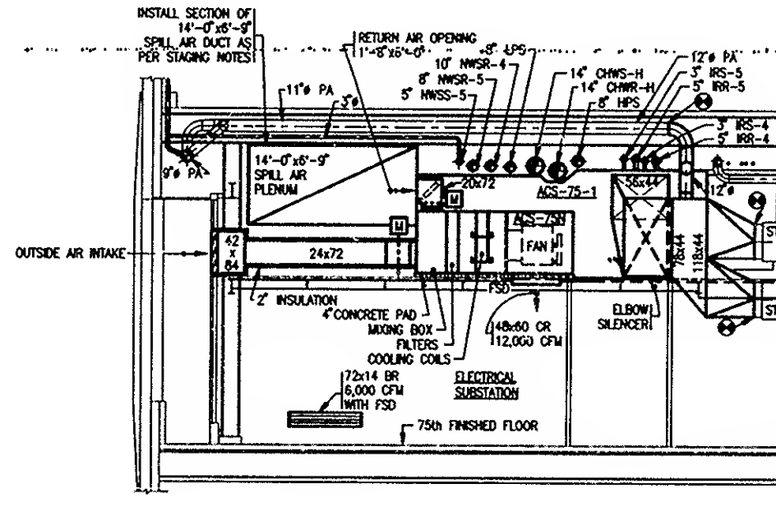

SECTION – INSTALLATION K / M-17

SCALE IN FEET 0 8 16

FILE NAME: 75N_M18 SCALE FACTOR 1=8